



Telephone:
 Fax:
 VAT Registration No.:

A16	ABS control module
X88	AC connector
A23	Alarm system control module
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
B132	Camshaft position (CMP) sensor
S258	Clutch pedal position (CPP) switch
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
Y28	EGR system valve
A35	Engine control module (ECM)
K12	Engine coolant blower motor relay
B24	Engine coolant temperature (ECT) sensor
Y104	Evaporative emission (EVAP) canister purge valve
B127	Exhaust gas pressure sensor
M12	Fuel pump
F	Fuse
B72	Heated oxygen sensor (HO2S)
K13	Heated rear window relay
Y99	Idle air control (IAC) valve
T1	Ignition coil
A4	Ignition control module (ICM)
15	Ignition switch - ignition ON
S39	Inertia fuel shut-off (IFS) switch
Y3	Injector
A5	Instrument panel
A75	Instrumentation control module
B25	Intake air temperature (IAT) sensor
Y102	Intake manifold air control solenoid
B83	Manifold absolute pressure (MAP) sensor
B30	Mass air flow (MAF) sensor
W21	Octane adjuster
S259	Park/neutral position (PNP) switch
K46	Relay module
B147	Throttle position (TP) sensor
Y23	Transmission modulator
S249	Transmission range (TR) switch
B33	Vehicle speed sensor (VSS)

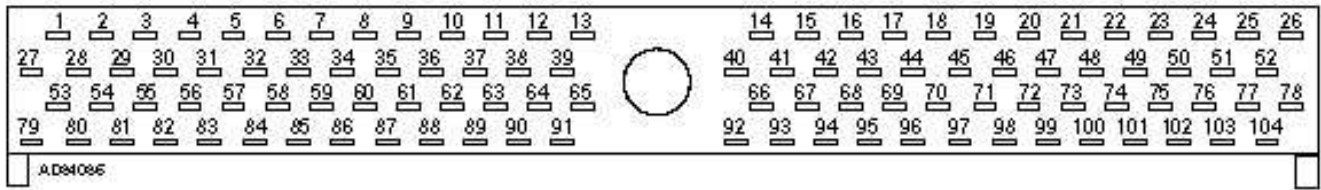

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

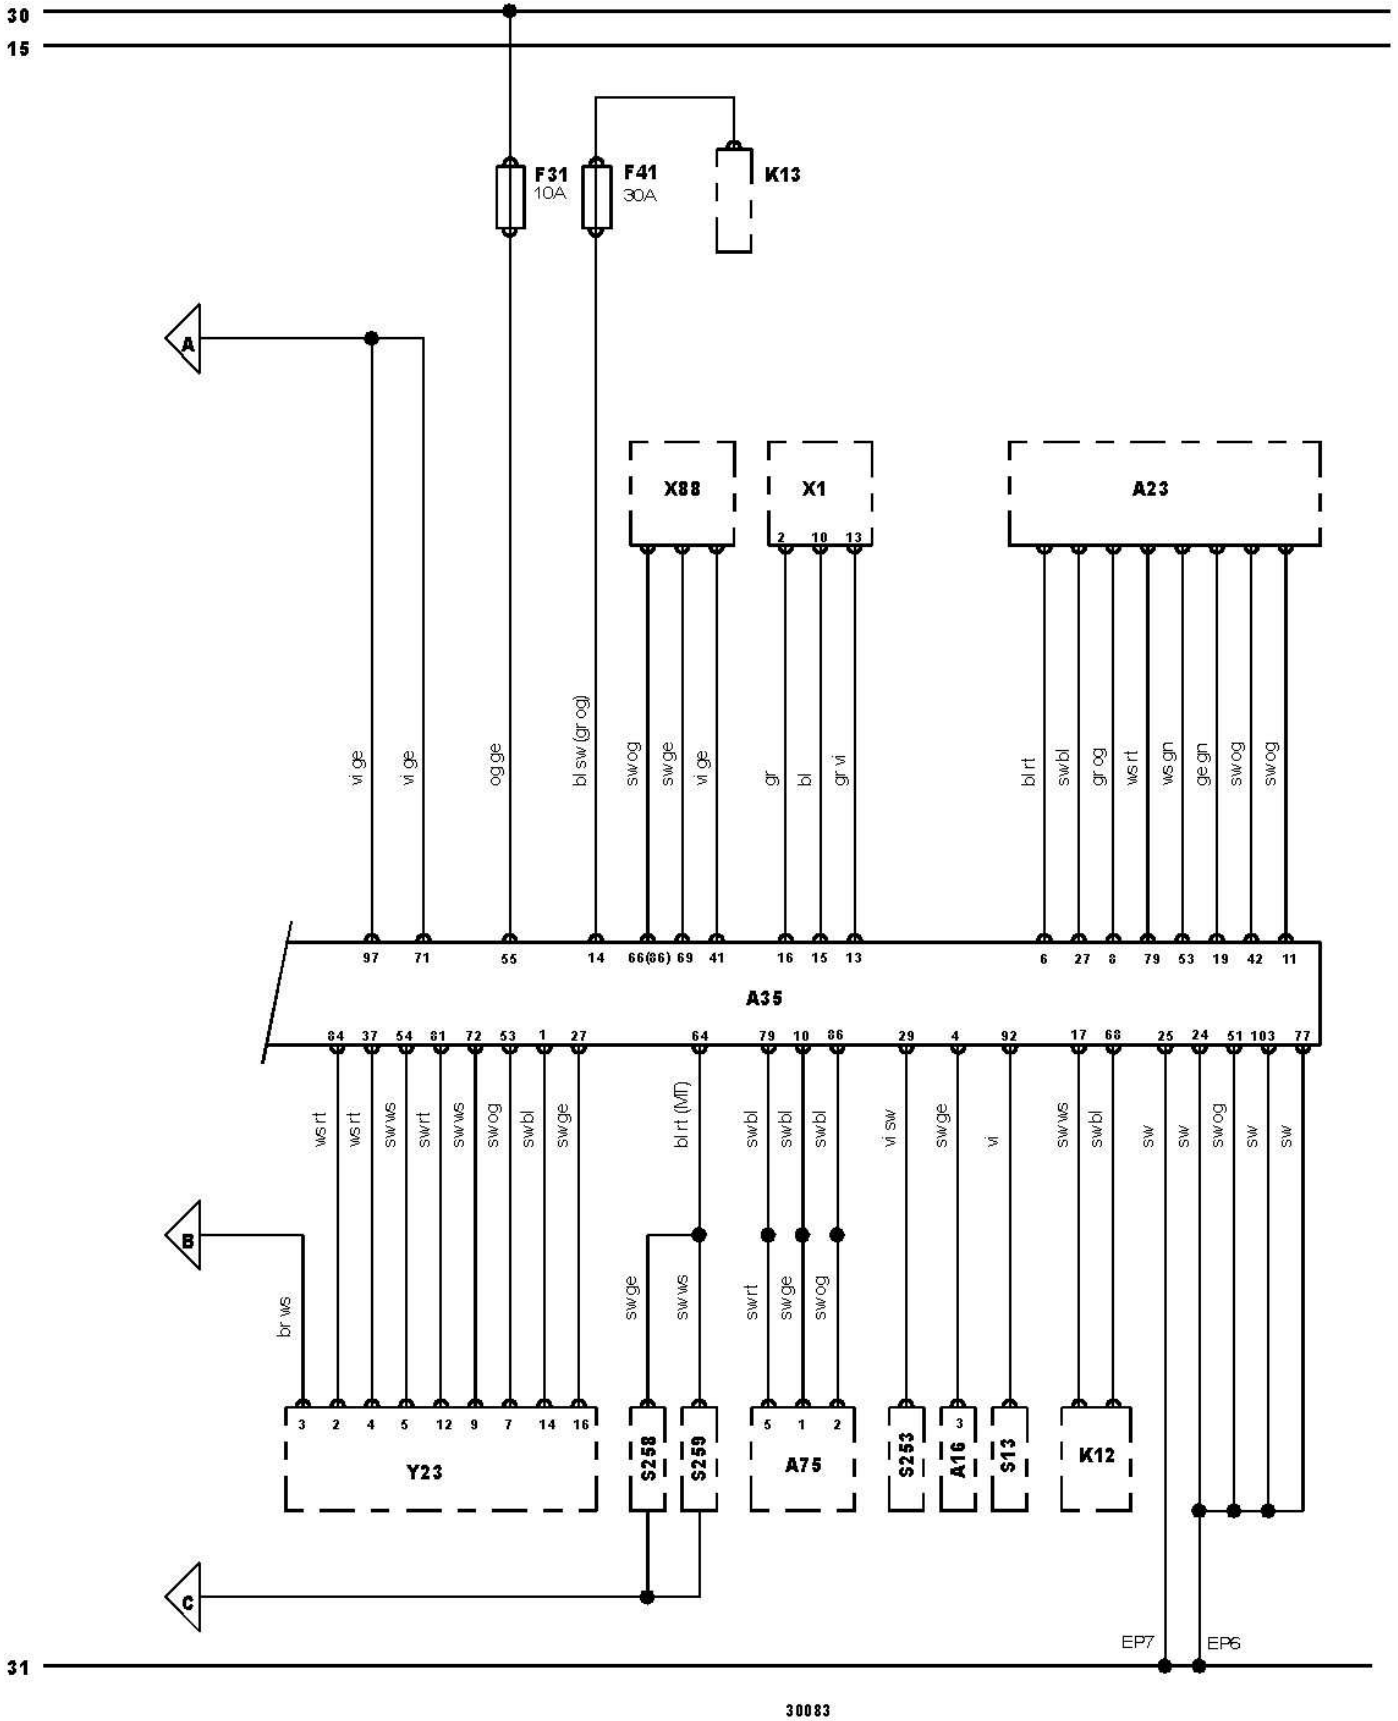

30083