

Telephone:

Fax:

VAT Registration No.:

S338	AC refrigerant dual pressure switch
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
A94	Combination control module/relay
X1	Data link connector (DLC)
A35	Engine control module (ECM)
K46	Engine control relay
B24	Engine coolant temperature (ECT) sensor
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump
F	Fuse
B72	Heated oxygen sensor (HO2S)
Y99	Idle air control (IAC) valve
A52	Ignition amplifier
T1	Ignition coil
15	Ignition switch - ignition ON
A162	Immobilizer control module
S39	Inertia fuel shut-off (IFS) switch
Y3	Injector
B25	Intake air temperature (IAT) sensor
B83	Manifold absolute pressure (MAP) sensor
W21	Octane coding plug
K4	Starter motor relay
B147	Throttle position (TP) sensor
K106	Transmission kick-down relay
Y117	Transmission valve block
A19	Trip computer
B33	Vehicle speed sensor (VSS)
K256	Wide open throttle (WOT) relay

